

LISEO® STOVES & FIREPLACES



OPERATION AND INSTALLATION MANUAL

European Standard Certification UNE EN-13229 inserts
European Standard Certification UNE EN-13240 stoves

LISEO s.r.o. Folknářská 1246/21 Děčín 2 – Nové Město 405 02



INTRODUCTION

1. GUARANTEE CONDITIONS

1.1. SAFETY WARNINGS3
1.2. GUARANTEE CONDITIONS.....3

2. INSTALLATION IN ACCORDANCE WITH LOCAL AND NATIONAL STANDARDS

2.1. OPERATING AREA4
2.2. PRECAUTIONS4
2.3. CONNECTION TO THE EXTERNAL AIR INTAKE.....4
2.4. CONNECTION TO THE FLUE PIPE.....5
2.5. ASSEMBLY OF CLADDING.....5

3. CONTROL OF THE APPLIANCES6 - 8

4. DIMENSIONS AND TECHNICAL SPECIFICATIONS9

5. INSTALLATION AND ASSEMBLY

5.1. PREPARATION AND UNPACKING.....9
5.2. GENERAL ASSEMBLY RULES.....9

6. OPERATION

6.1. PRE-LIGHTING WARNINGS.....9
6.2. CHOICE OF FUEL10
6.3. FIRST LIGHTING10
6.4. CONTROL OF COMBUSTION10
6.5. EMERGENCY SITUATIONS.....11

7. MAINTENANCE AND CLEANING IN CHARGE OF THE USER

7.1. CLEANING THE GLASS11
7.2. CLEANING OUT THE ASHES.....11
7.3. CLEANING THE INTERIOR WALLS (refractory)12
7.4. CLEANING THE DEFLECTOR IN CAST IRON.....12
7.5. CLEANING OF PAINTED PARTS12

8. CLEANING TO BE DEALT WITH BY SPECIALIZED TECHNICIAN

8.1. CLEANING FLUE PIPE.....12



INTRODUCTION

Dear customer,

We desire to thank you for the trust placed in **LISEO** products.

Throughout the years, you will appreciate the quality of our product, result of our interest in offering to you the best technology, ease of use and, above all, safety.

For obtaining an optimal performance, we recommend you to read carefully this manual before the first firing.

MANUAL PRESERVATION

Ensure that this manual is always with the appliance even in the event of a change of owner, user or moved to another location.

You can request another copy to the technical service in the area.

WARNING AND WARRANTY

CONDITIONS

The installation must be performed by authorized personnel. Request to your installer a declaration of conformity of the installation, in which he will assume full responsibility for the final installation and therefore the proper functioning of the installed product.

Pay special attention to the laws and regulations in the area of the device installation.

LISEO doesn't take any responsibility in the event of failure to comply with these precautions.

To ensure its proper operation, the stove components can only be replaced by original spare parts and repaired by an authorized Assistance Technical Center.

These devices **are not** intended for use by persons with reduced physical, sensory or mental limited or without experience or knowledge. Children should be supervised at all times to ensure that they do not play with the equipment or come into contact with hot work surfaces.

After a long period of inactivity, before turning the appliance, check that there are no obstructions.

In this case, contact the Assistance Service Center.

In case of fire in the flue pipe, keep closed the door and the input of combustion air of the fireplace. Request the intervention of the competent authorities.

EXCLUSIONS

Excluded from the warranty all parts that may be defective due to negligence or careless use, incorrect maintenance or installation not compliant with that specified by LISEO.

They are not part of the guarantee those parts subject to normal wear such **as joints, glass and any all parts that can be removed from the fire box.**

Replaced parts will be warranted for the remaining warranty period, with effect from the date of appliance purchase.

The glass are guaranteed until the moment when the authorized installer confirms its integrity and completes commissioning.

2. INSTALLATION IN ACCORDANCE WITH LOCAL AND NATIONAL STANDARDS

2.1. OPERATING AREA

Ventilation: To allow proper operation, verify that the oxygen required for combustion can be obtained in sufficient quantity in the place where it is to install the appliance.

Location of appliance: Choose a central location in the room that favors a good distribution.

Ensure that there aren't made or coated with materials that are flammable or degrade with heat effect (wallpaper, carpet, light closures based on plastics, etc.)

The installation of the appliance is not allowed in bedrooms or bathrooms neither in places that has been already installed another heating appliance or a fume extraction system without an independent air intake (kitchen extractor, fireplace, stove, etc.).

It is forbidden to place the fireplace in explosive environments.

With wooden floors, provide for protection of the soil surface in accordance with the rules in force in the country.

2.2. PRECAUTIONS

The installation and assembly of the fireplace must be performed by qualified personnel.

The chimney must be connected to an internal or external vertical duct in accordance with existing laws, which can discharge smoke at the highest point of the house, waterproof and properly insulated.

2.3. CONNECTION WITH EXTERNAL AIR INTAKE


The chimney must have at least as much air as you need for a normal combustion of the appliance and the ventilation of the place. Respect the UNI 10683 norm relative to the ventilation openings.



The ventilation grilles must be installed so that it can't be obstructed



2.4. CONNECTION TO THE EXTERNAL AIR INTAKE

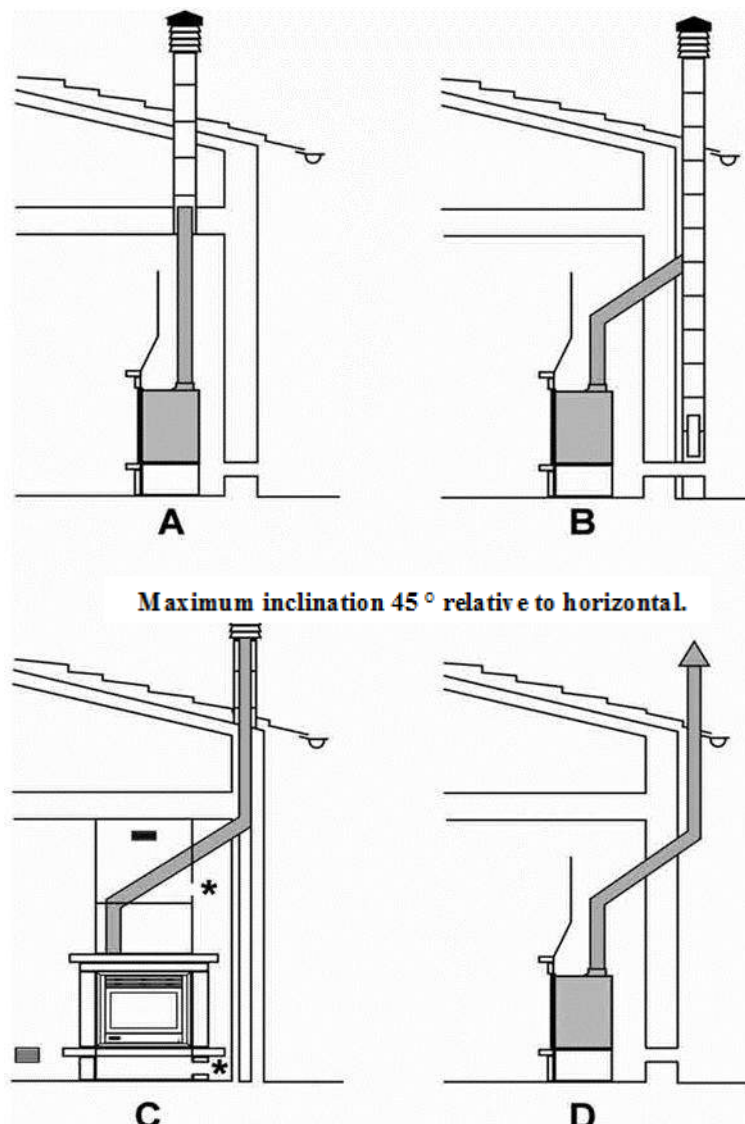

The smoke exhaust system must be unique to the insert (Not allowed pipe discharges common to other fireplace).

Fumes discharged is made from the opening situated at the top.

The discharge pipe must be connected to the outside using appropriate tubes and eventual isolation. It's necessary to use materials resistant to high temperatures.

2.5. ASSEMBLY OF CLADDING

The fireplace and the parts of the cladding must be attached together **WITHOUT ANY CONTACT WITH STEEL STRUCTURE** to prevent heat transmission to the coating and allow thermal expansions. Beware of wood finishes such as beams or shelves, which must be properly insulated.



In particular, the shelves should be placed at a distance upper to 30 cm from the top of the appliance.

3. CONTROL OF APPLIANCES


L5



L9

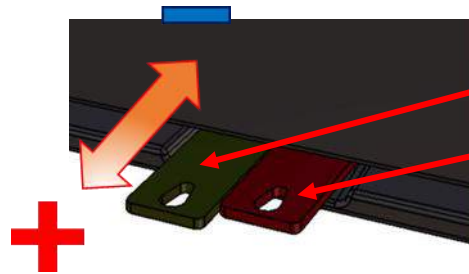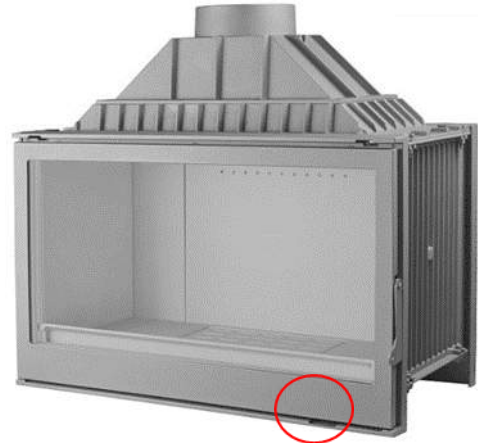


1° air combustion
2° air combustion
optional in some models

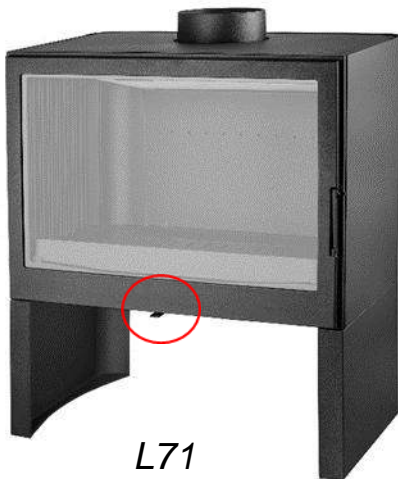



L71




L7

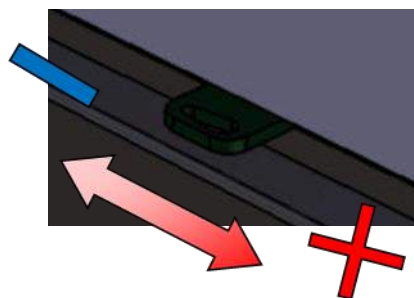


Valid for models of the L7 / K7 range

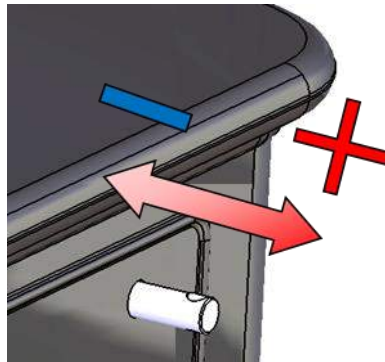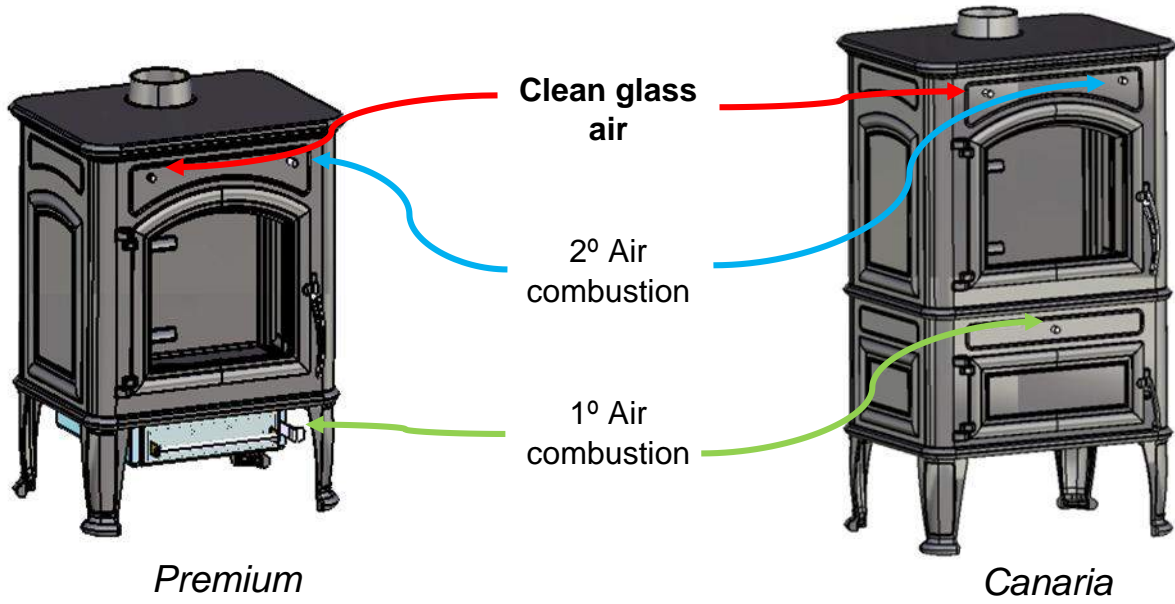

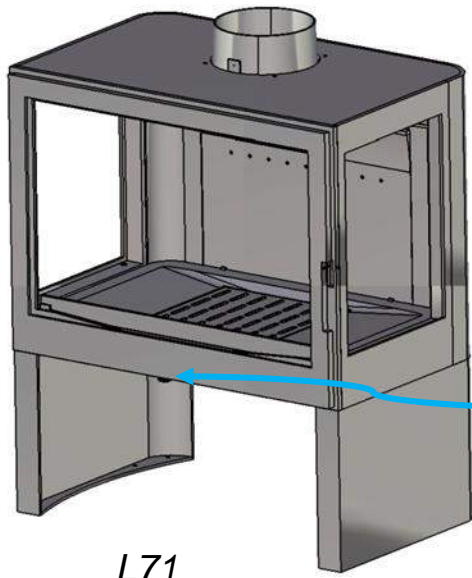


L71

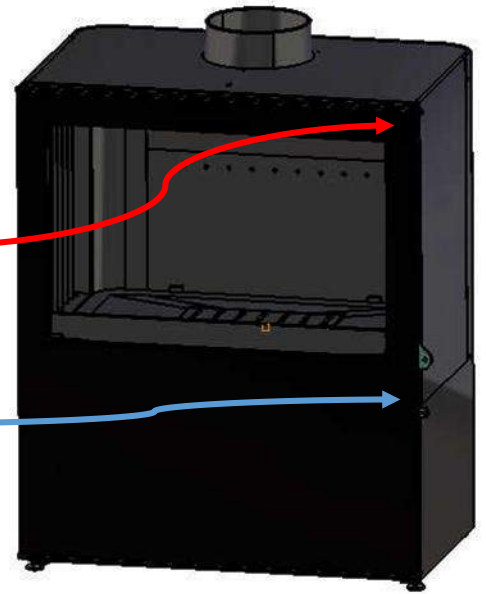


L71 Black

Clean glass
air

1° Air
combustion

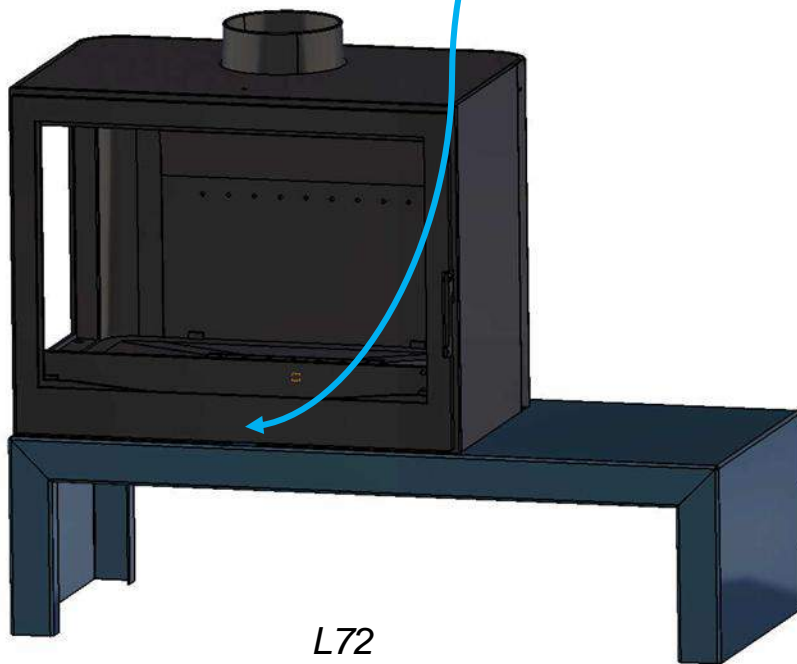

L72

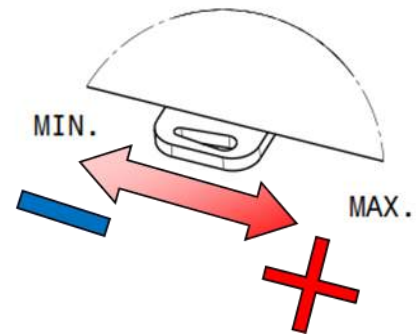

4. DIMENSIONS AND TECHNICAL SPECIFICATIONS

GENERAL INFORMATION

All our units are made of gray cast iron FG20.

All technical details and dimensions of the appliance are given in the data sheet attached to this manual.

5. INSTALLATION AND ASSEMBLY

IMPORTANT

The chimney can only be installed and connected to the flue by a specialized technician, respecting in every time the national and local standards and in compliance with UNI 10683.

5.1. PREPARATION AND UNPACKING



When you unpack the fireplace, check for perfect operation, as well as the possible presence of shipping damage. Any anomalies must be immediately reported to the transport carrier or seller.

Check the accordance with what is provided.



The chimney must always be moved in VERTICAL position.

The glass is fragile, it's necessary to protect it.

If possible, unpack the fireplace near the area where you will install it.

5.2. GENERAL ASSEMBLY RULES



The appliance must always lean on a structure which support the weight and leave at least 5 cm air gap between the chimney and walls.

If the chimney is placed on a floor or near combustible walls, a proper insulation is recommended.

6. OPERATION

6.1. PRE-LIGHTING WARNINGS

Make sure you have read and perfectly understood the contents of this instruction manual.

Remove from the fireplace and the door all accessories, adhesives and equipment that could burn.

During the first lighting, the paint completes its drying and hardens. If you touch the paint, it could cause some damage.



During this phase the paint may release a little smoke and smell of paint. Make sure the room is sufficiently ventilated during this phase.

Smoke and the smell of paint will vanish after about one hour of operation.

Please note, however, that are not harmful to health.

Do not overheat the chimney immediately, take it gradually to the desired temperature.

Do not try to immediately achieve maximum performance of the appliance.



6.2. CHOICE OF FUEL

Use only wood with suitable characteristics. Without moisture.

Get advice from your installer about the most appropriate wood for burning existing in your region.

Heat capacity of the timber in relation to the contained moisture.

Wood drying time (i.e. beech)	Humidity %	Heat power kcal/h
Freshly cut	50	/
3 months	40	2410
6 months	35	2700
9 months	30	2900
12 months	25	3150
15 months	20	3400
18 months	15	3710
21 months	10	3980

6.3. FIRST LIGHTING

In the first lighting, you are advised to proceed with caution and use fine and dry wood.

Place the primary air input fully open.

DO NOT USE under any circumstances: alcohol, gasoline or any other explosive flammable substances. During the first lightings, it could release fumes or unpleasant odors caused by the drying of the paint; it is not hazardous, it's just necessary to ventilate the room. Once combustion is performed regularly, introduce wood pieces of normal size.

When you open the door, do it slowly to avoid returns of smoke in the room.

Never load the fireplace with excessive wood (see technical data).

During use, the metal structure, the handles and the glass reach hot temperature; therefore, use proper thermal protection for handling.

During normal use, keep the fireplace's door always closed completely.

6.4. CONTROL OF COMBUSTION

The regulation is in the front (under the door).

Moving the control (to – “or” +) we reduce or increase the quantity of air which contribute to combustion.

PRIMARY AIR air input from the bottom.

SECONDARY AIR air input from the back (deflector).

GLASS CLEAN AIR prevents the glass from getting dirty during combustion.

Once the flame in the fireplace is well underway, move the air primary lever to “minus”. In this condition, the primary air input is reduced and the air flow passes to the second combustion, so we can regulate the desired power of combustion.

6.5. EMERGENCY SITUATIONS

If, for any reason, you have to quickly extinguish the fire of the fireplace or intervene in a fire trapped in the flue pipe, act following the proposals below:

- Always leave the appliance door closed,
- Close the air inputs,
- Request urgently the intervention of the competent organisms.

7. MAINTENANCE AND CLEANING IN CHARGE OF THE USER



ATTENTION

Only clean the chimney when it's completely cold

7.1. CLEANING OF THE GLASS




To clean the glass, you can use specific products, or some white ash and a newspaper page. Clean regularly the glass; an accumulation of dirt and soot increases the glass cleaning time.

7.2. CLEANING OUT THE ASHES

Exclusively with the fireplace off and cold. We recommend daily cleaning of the ash drawer.

Ash can contain small glowing embers that can stay incandescent for hours.

Store the ashes outdoor in a metal container until you are sure that pose no danger.

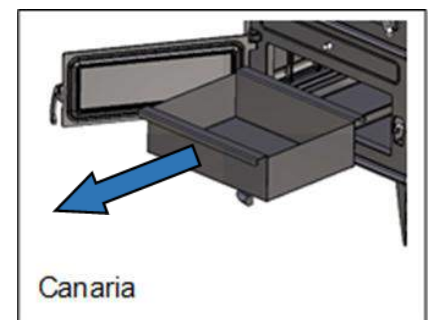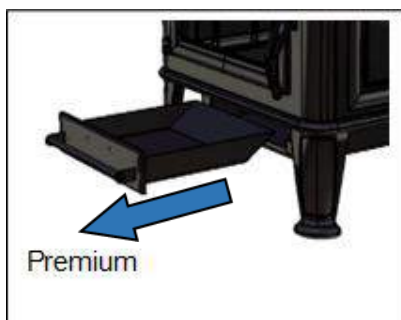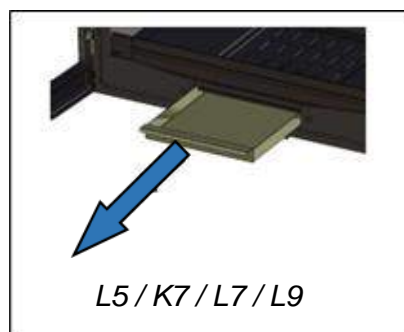

7.3. CLEANING THE INTERIOR WALLS (refractory)

With the cold chimney, brush the soot that may be adhered.

7.4. DISASSEMBLY AND CLEANING THE CAST IRON DEFLECTOR

See technical sheet attached for your appliance

7.5. CLEANING OF PAINTED PARTS

Do not use abrasive or aggressive products or materials. Wipe with a paper or cotton wet cloth. Avoid cleaning with wet cloths painted parts when hot, to avoid thermal shock to the paint.

8. CLEANING TO BE DEALT WITH BY SPECIALIZED TECHNICIAN

8.1. CLEANING FLUE PIPE

We recommend performing a mechanical cleaning of the flue pipe at least once a year. The slag buildup can cause problems in the evacuation of the fumes and increases the risk of fire in the smoke flue.

ATTENTION



For maintenance, we advise to contact a specialized center that will be in a position to define, according to the type of installation and depending on the use made of it, the frequency of cleaning and maintenance.