
Bali® OUTDOORS

User Manual

Round 2-in-1 Fire Pit w/Grill

Model# SRFP12507

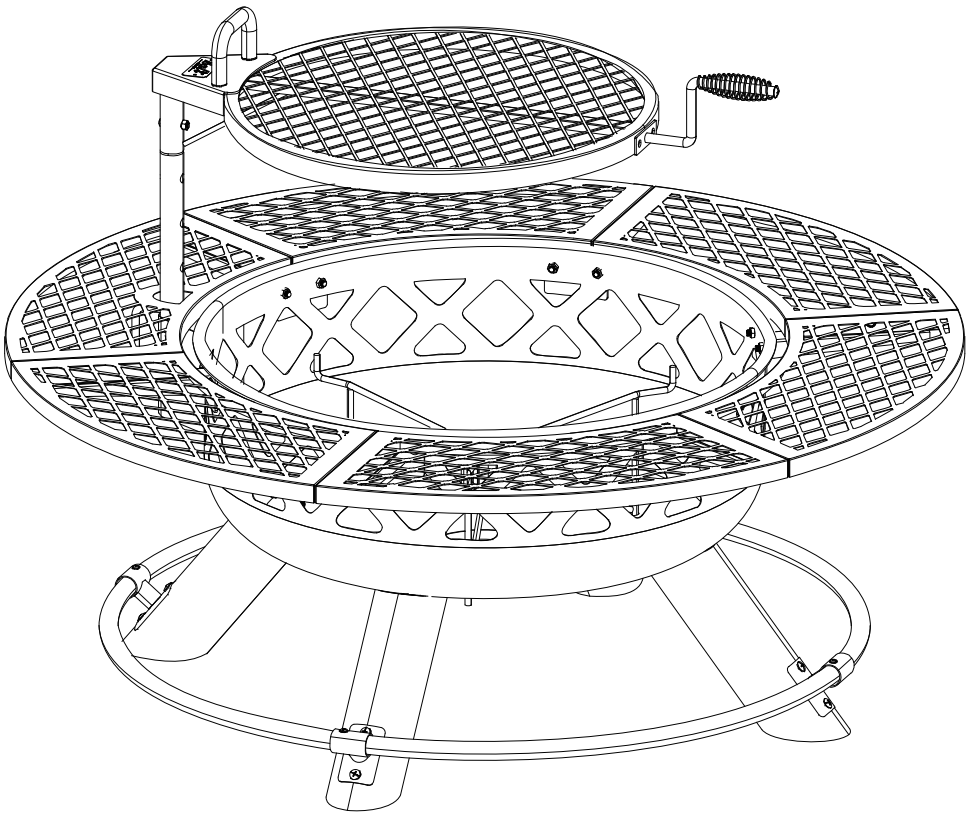

Made in China

TABLE OF CONTENTS

General Safety Instructions ---------- **2**

Package Contents ---------- **4**

Assembly Instructions ---------- **5**

Operation Instructions ---------- **9**

The round 2-in-1 Wood Burning Fire Pit is a versatile outdoor heating solution that functions as both a fire pit and a grill. Its durable steel construction and round design provide efficient heat distribution and a stylish addition to your outdoor space.

Enjoy your round 2-in-1 Fire Pit responsibly! Always follow local fire regulations.

BEFORE ASSEMBLY:

● Verify all the parts are included BEFORE you begin assembly. Refer to the Parts Lists section. For your convenience, some parts might be pre-assembled or attached to appliance components.
● If any parts are missing, do not attempt to assemble the appliance. Call customer service to request replacement parts.
● Read the Assembly section completely before beginning the assembly process. This will allow you to become familiar with parts and steps. In some cases,it might be necessary to leave hardware loose for further assembly steps.
● Tools required for assembly (not included): Phillips screwdriver, Ajustable open end wrench.

Keep this manual for future reference. It contains useful information and important procedures for maintenance,safety and cooking tips.

⚠ DANGER



Carbon Monoxide Hazard

Burning wood produces carbon monoxide, which has no odor.

Using this fire pit in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car, or home.

⚠ WARNING

Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

Do NOT store or use an LP gas cylinder within 10 feet (3.05m) of this fire pit while it is in operation.

NOTICE

Always check local fire regulations and municipal bylaws to ensure your fire pit meets local standards.

The use of wood burning fire pits may be strictly regulated in some urban or dry environments.

⚠ GENERAL SAFETY INSTRUCTIONS

⚠ WARNING

FOR OUTDOOR USE ONLY. NOT FOR USE BY CHILDREN.

⚠ WARNING

1. **Improper installation, adjustment, alteration, service, or maintenance may result in property damage, injury or death.**
2. **Do NOT use this fire pit without reading this entire document and all WARNINGS, cautions and instructions.**
3. **Read the installation, operation, maintenance instructions thoroughly before installing or servicing this equipment.**
4. **Failure to follow these instructions could result in a fire or explosion, which could cause property damage, personal injury or death.**

Save these instructions for future reference. If you are assembling this fire pit for someone else, give this manual to him or her to save for future reference.

WARNING


1. **This item is for OUTDOOR use only, and shall NOT be used in a building, garage or any other enclosed area.**
2. **Always use this fire pit on a hard level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.**
3. **Do NOT use this fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.**
4. **NOT for use by children. Keep children and pets away from the fire pit while in use and until the fire is extinguished and the metal has cooled.**
5. **Do NOT leave a lit fire pit unattended, especially around children and pets.**
6. **All surfaces of this fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (gloves, BBQ mittens, pot holders, hot pads, etc). Never touch ashes or coals to see if they are hot.**
7. **Do NOT attempt to move or store this fire pit until ashes and coals are completely extinguished.**
8. **Do NOT remove ashes or coals until they are completely extinguished.**
9. **Use heat-resistant gloves or hot pads when contacting handles.**
10. **Do NOT use near walls, flammable and combustible articles, or under overhead coverings. This fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke.**
11. **Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.**
12. **Do NOT store or use an LP gas cylinder within 10 feet (3.05m) of this fire pit while it is in operation.**
13. **Do NOT use gasoline, kerosene, diesel fuel, or lighter fluid to start a fire or enhance an existing fire.**
14. **Do NOT burn charcoal briquette, lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted or stained or pressure treated wood.**

⚠ GENERAL SAFETY INSTRUCTIONS


15. Do NOT alter this fire pit in any manner.
16. Do NOT use this fire pit until it is COMPLETELY assembled and all parts are securely fastened and tightened.
17. Do NOT use this fire pit near automobiles, trucks, vans or recreational vehicles.
18. Do NOT use in an explosive atmosphere. Keep outdoor area clean and free from combustible materials, gasoline and other flammable liquids.
19. Do NOT use this fire pit under an overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
20. Always empty this fire pit before each use.
21. Do NOT wear flammable or loose clothing when operating this fire pit.
22. Do NOT use in windy conditions.
23. This fire pit is NOT to be used in or on boats or recreational vehicles.
24. When using this fire pit, exercise the same precautions you would with any open fire.
25. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this fire pit.
26. Keep all electrical cords away from a hot fire pit.
27. Use long, sturdy fire pit tools when adding or moving logs.
28. Do NOT place wood directly into bottom of the fire pit. Place wood only on the wood grate.
29. Do NOT overload the fire pit. Do not add additional firewood until the fire burns down.
30. Do NOT lean over this fire pit when lighting or when in use.
31. Do NOT place hot fire pit tools onto combustible surface such as grass, wooden deck or furniture.
32. Avoid breathing smoke from the fire and avoid getting it into your eyes.
33. This fire pit should be thoroughly inspected and cleaned on a regular basis.
34. After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and/or clean-up is executed.
35. Death, serious injury or property damage may occur if the above is not followed exactly.

PACKAGE CONTENTS


KEY.	DESCRIPTION	NO.
1	Handle	1
2	Cooking Grate	1
3	Swing Handle	1
4	L-shaped Retaining Pin	1
5	Charcoal Basket *(Sold separately)*	1
6	Support Column	1
7	Tabletop Panel w/Hole	1
8	Tabletop Panel	5
9	Folding Tripod	1
10	Tabletop Panel Support	6
11	Fire Bowl	1
12	Support Ring	4
13	Leg	4
14	Poker	1

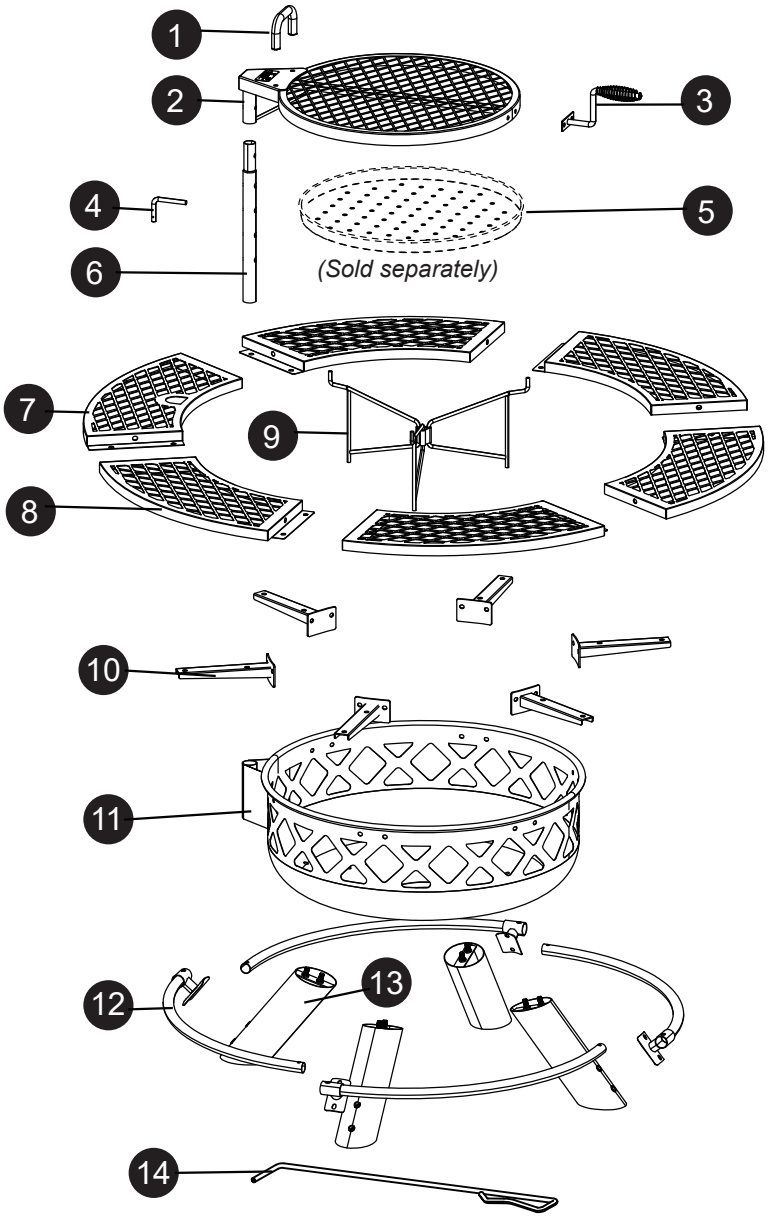

HARDWARE CONTENTS

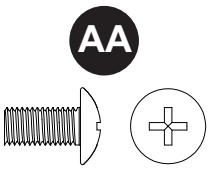

M6 x 15
Screw
Qty. 8

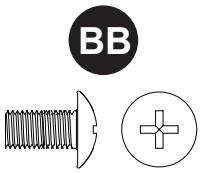


M6 x 12
Screw
Qty. 32



M8 Nut

Qty. 8

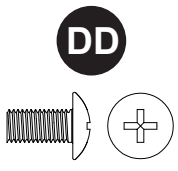

M5 x 12
Screw
Qty. 2




M6 NUT


Qty. 15



∅ Washer
(preinstalled on legs)
Qty. 8

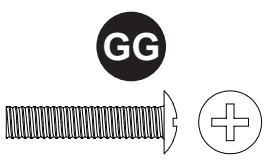

M6 x 30
Screw
Qty. 1

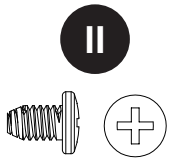


M5 x 8
Screw
Qty. 4

ASSEMBLY INSTRUCTIONS

Step 1

NOTE: *Assemble the fire pit on a non-abrasive surface.*

Attach legs to fire bowl.

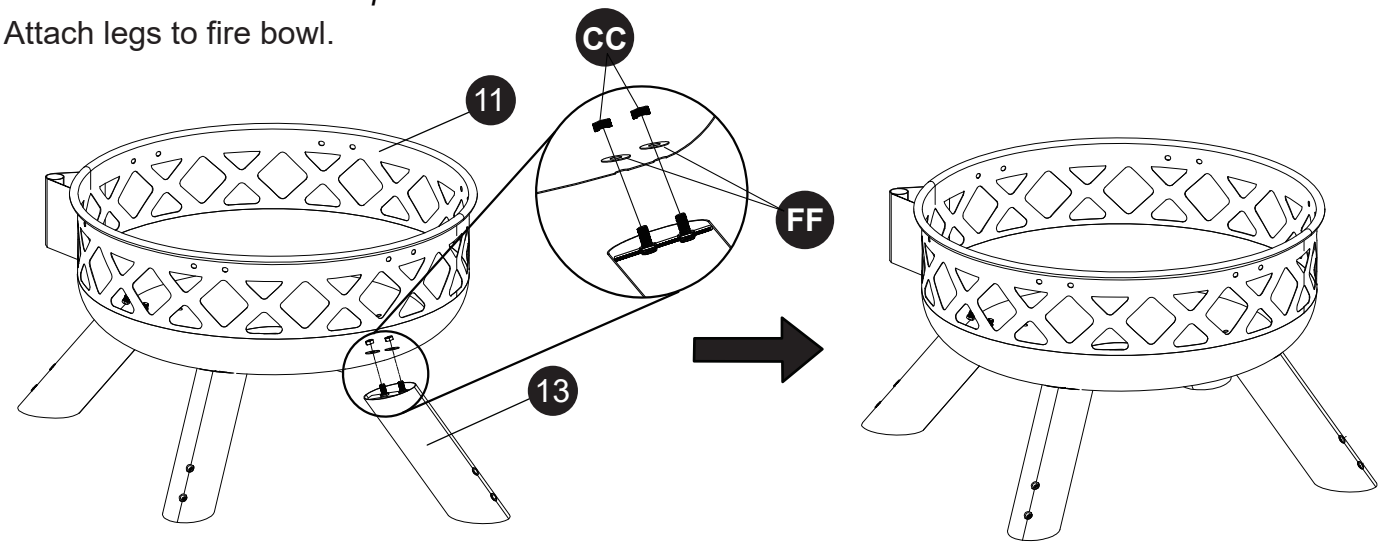


Hardware used:

CC — M8 Nut / 8pcs *(preinstalled on legs)*

FF — Ø Washer / 8pcs *(preinstalled on legs)*

Step 2

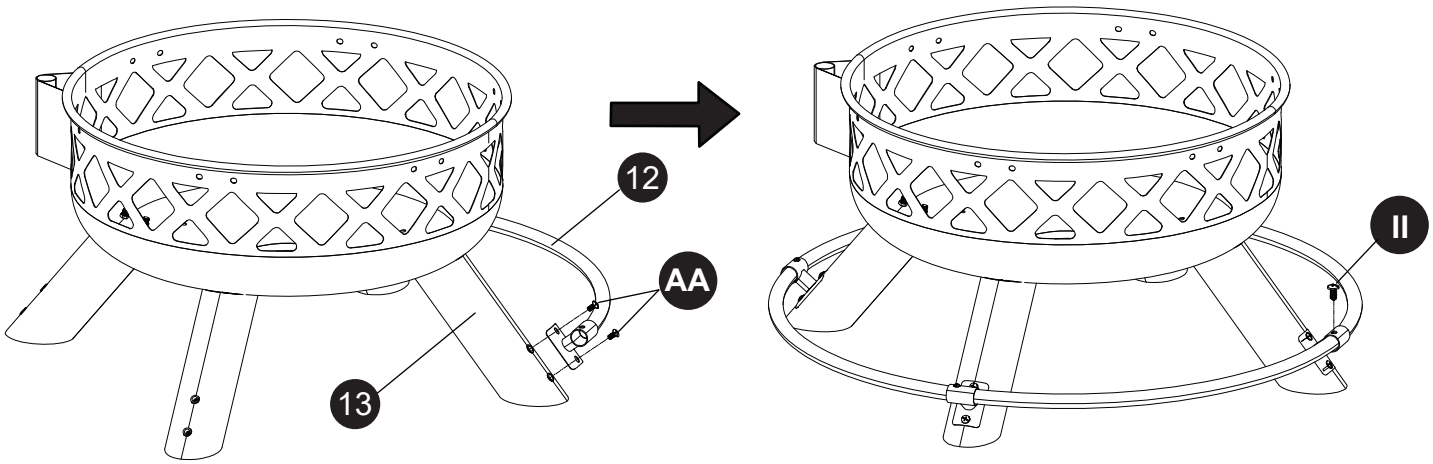


Hardware used:


AA — M6 x 15 / 8pcs

II — M5 x 8 / 4pcs

ASSEMBLY INSTRUCTIONS


Step 3

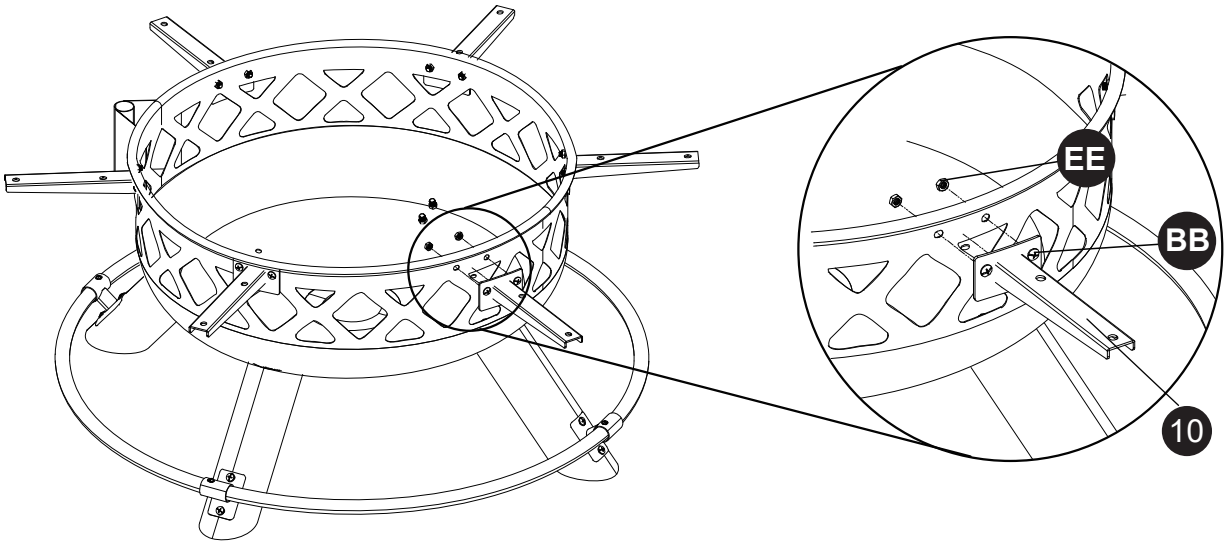


Hardware used: BB  M6 x 12 / 12pcs

EE  M6 Nut / 12pcs


Step 4

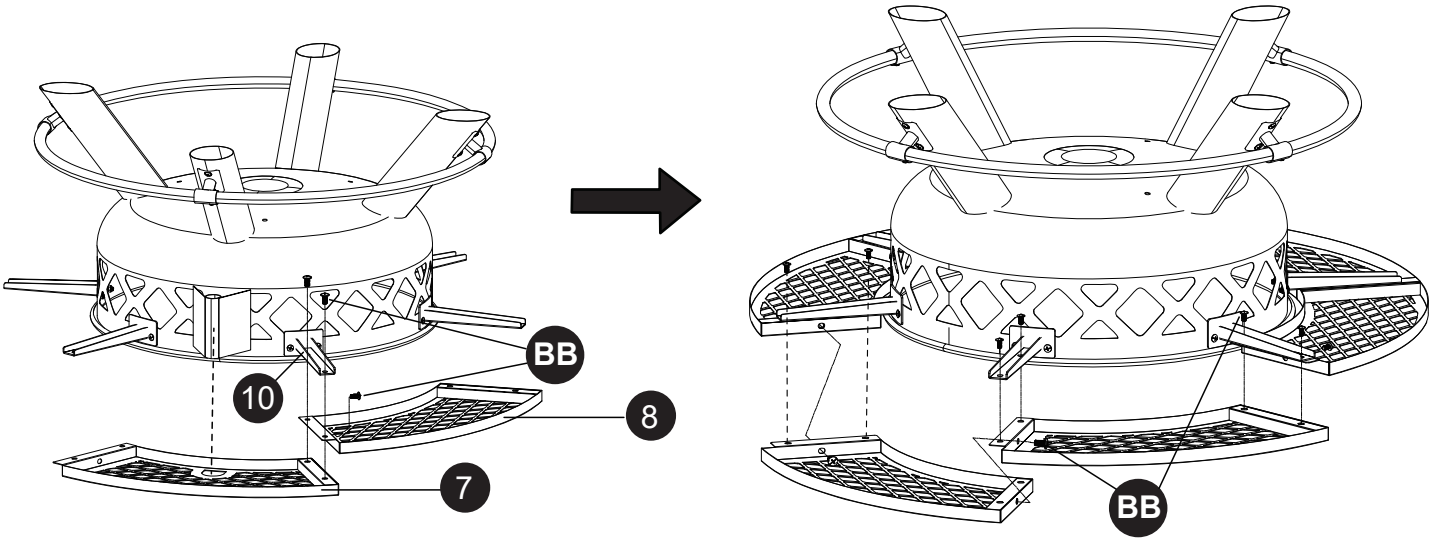


Hardware used: BB  M6 x 12 / 18pcs


ASSEMBLY INSTRUCTIONS


Step 5

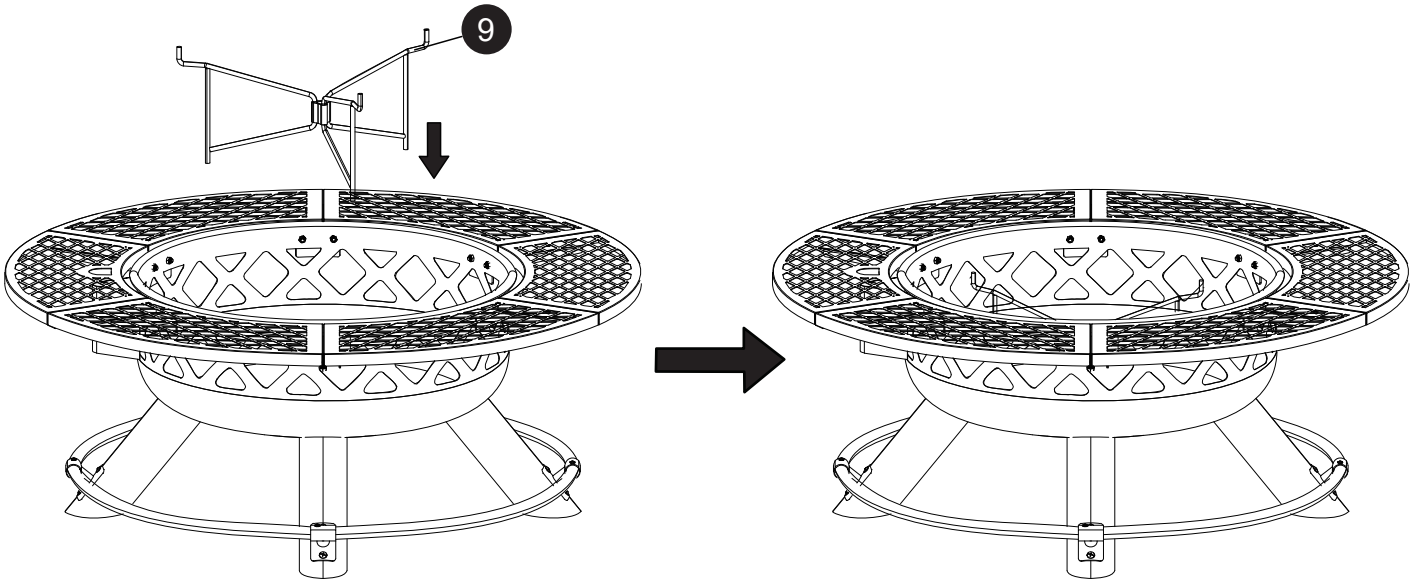

Step 6

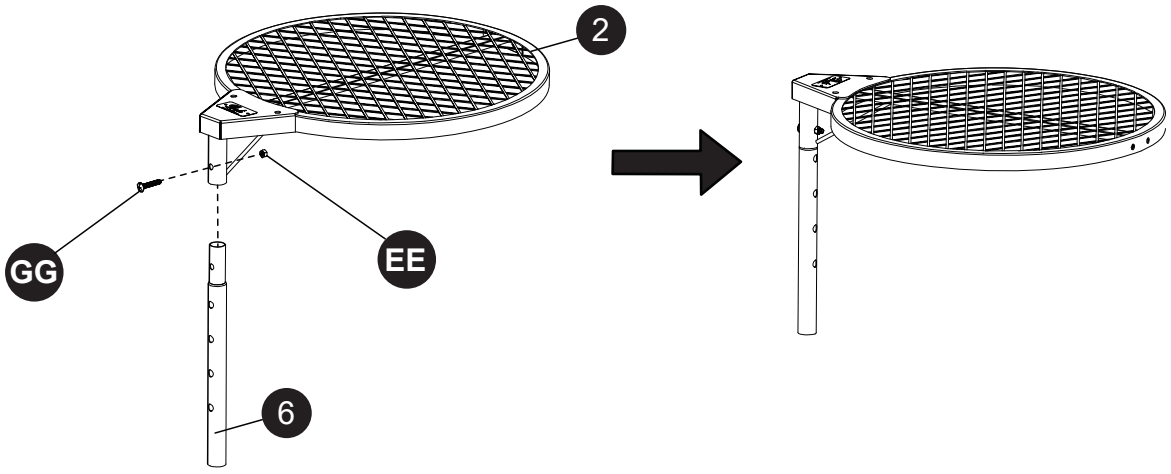


Hardware used: GG  M6 x 30 / 1pcs



EE  M6 Nut / 1pcs

ASSEMBLY INSTRUCTIONS


Step 7

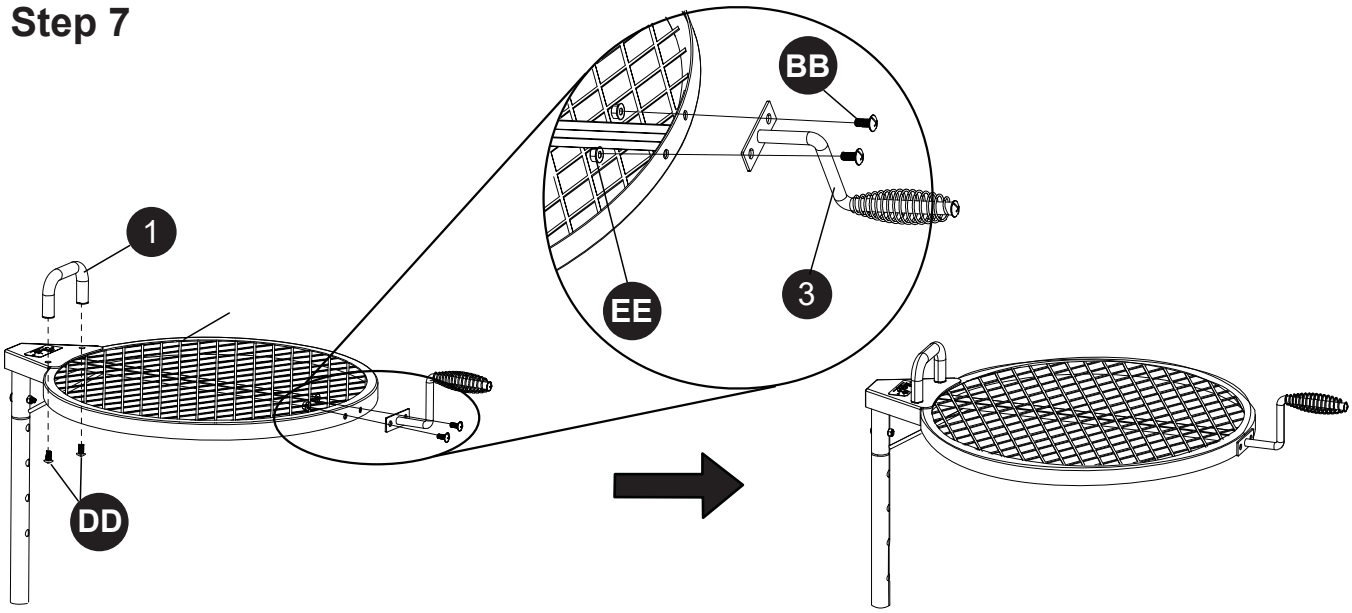

Hardware used:

BB		M6 x 12 / 2pcs
EE		M6 Nut / 2pcs
DD		M5 x 12 / 2pcs

Step 8

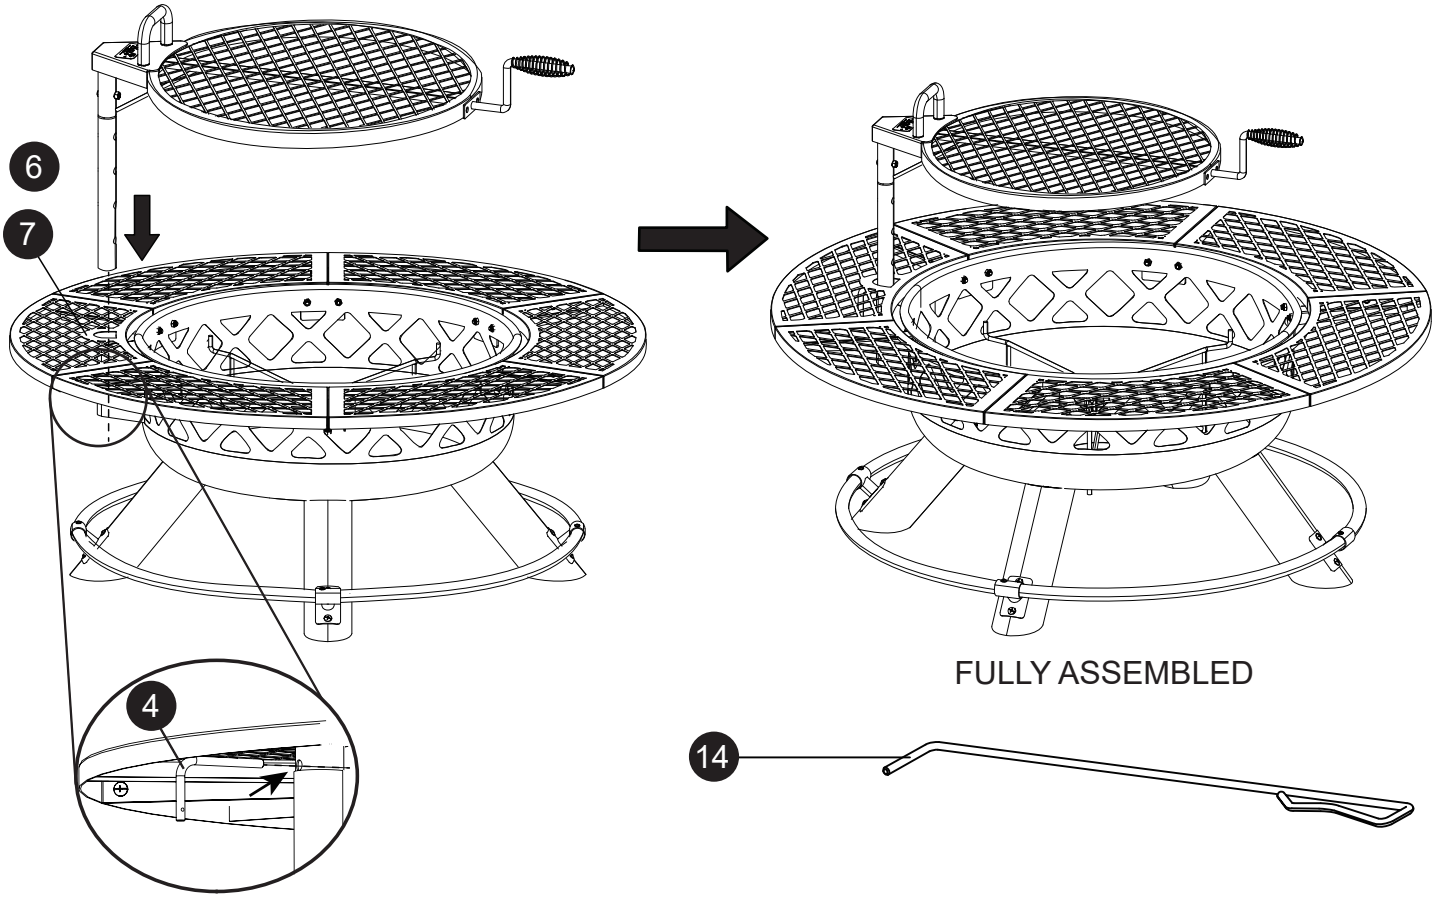


FULLY ASSEMBLED

OPERATION INSTRUCTIONS


Multi-Functional Setup

This unit features three operational modes as illustrated below:

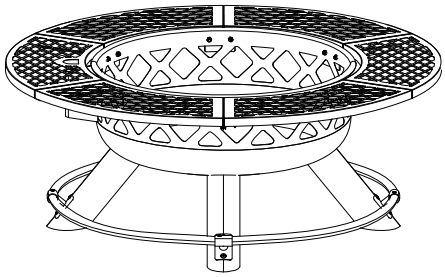


Option 1 (Basic):

Wood burning firepit.

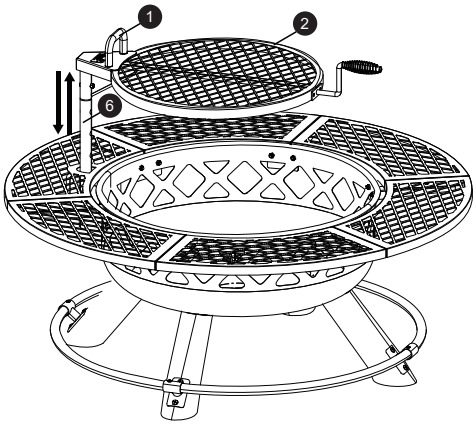

Option 2 (Enhanced):

- Wood-Fired Grill Use glowing wood embers (no charcoal needed) for natural flame-grilled taste.
- While wearing gloves or barbecue mitts, grasp the cooking grate assembly(1,2&6) and remove L pin(4). Position the grate assembly at the desired height and install pin into the appropriate hole.

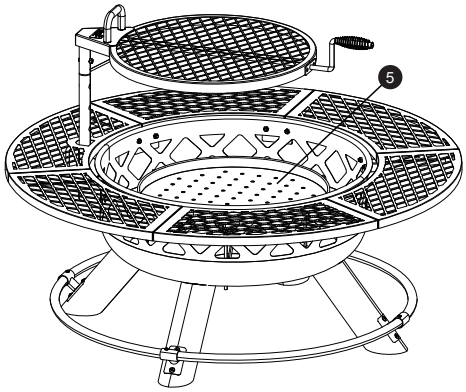

Option 3 (Pro):

Charcoal Grill(*Sold separately)*.

LIGHTING INSTRUCTIONS

1. Do NOT use gasoline, kerosene, diesel fuel, or lighter fluid to start a fire.
2. Keep children and pets away from the fire pit while in use and until the fire is extinguished and the metal has cooled.
3. Do NOT lean over this fire pit when lighting or when in use.
4. Begin with a clean/empty fire bowl.
5. Build a small pyramid of dry kindling at the bottom center of the firebowl, or place a natural fire starter
6. Place dry, seasoned hardwood onto the grate by stacking around and over the starting layer. Make certain the length of the wood is less than 3/4 the diameter of the fire bowl.
7. Light the kindling or fire starter using a match.

TENDING A FIRE

Once the fire wood is burning, you may need to shift the wood to enhance the fire as well as add more fire wood to create your desired fire.

Using long handled fire pit tools (tongs or poker), move the fire wood and coals as needed to allow airflow for more sufficient burning.

DO NOT add flammable liquids (gasoline, diesel, kerosene, lighter fluid or alcohol) to a hot/lit fire. If the flames burn out, enhance the fire by adding kindling and more seasoned hardwood. If additional wood is required, carefully place it on top of coals.

OPERATION INSTRUCTIONS

EXTINGUISHING A FIRE

If possible, allow a fire to burn itself out. However, DO NOT leave a fire unattended.

DO NOT use water to extinguish a fire. This could result in injury from burner embers. It could also damage the fire pit.

Using fire pit tools, spread coals/embers to allow them to burn out completely. DO NOT attempt to move or dump the fire pit until the fire is out and the fire pit has cooled.

MAINTENANCE

Routinely clean and inspect the fire pit to extend the product life and maintain safe operating conditions.

To avoid burns, DO NOT attempt to inspect or performance maintenance until the fire pit has completely cooled. DO NOT remove ashes until they are completely cooled and extinguished.

Inspect all components and connections for signs of damage or corrosion. Discontinue use immediately if any defect or damaged parts are found and contact customer service.

If corrosion is found, remove as much corrosion as possible using a wire brush. Then repaint using powder made for high temperature applications. If any hardware is corroded, replace with new parts before next use.

NOTE: It is normal for the coating to discolor or burn off after repeated usage. To properly maintain the fire pit, remove excise corrosion and apply high temperature resistant powder.

CLEANING

Routinely clean and inspect the fire pit to extend the product life and maintain safe operating conditions.

To avoid burns: DO NOT attempt to clean the fire pit until it has properly and completely cool.
To avoid burns: DO NOT clean the fire pit while an active fire or smoulder embers are present.
To avoid burns: DO NOT use abrasive chemicals or oven cleaner as this could damage the paint finish.

1. Remove leftover coals and ash using a fire place scoop or shovel (or handheld garden shovel).
2. Rinse the fire bowl and dump the water.
3. Wash the exterior surfaces using a mild dish washing detergent. A brush might be required to help scrub some stains.
4. Rinse all surfaces and allow to dry or towel dry.

OPERATION INSTRUCTIONS

STORAGE

To avoid burns: DO NOT move or store this fire pit until the fire is out and it has completely cooled.

1. Once the coals are cold (no longer burning or smoldering) and the fire pit has cooled, remove and properly dispose of the ashes.
2. Move and store the fire pit in a dry location.
3. Cover the appliance with the PVC cover.

Always store the fire pit in a location out of reach of children and pets.
To help maximize the product life, keep the fire pit stored in a dry location or covered from weathering elements (rain, snow, etc).

GRILLING

If desired, this fire pit can be used to grill food using the cooking grid attachment. To do so, prepare a suitable fire for cooking and position the cooking grid at a desired height. The grid can swivel needed to access the fire or to move food away from the fire or heat.

⚠ WARNING

1. **ALWAYS USE BARBECUE MITTS WHEN MOVING COOKING GRID. DO NOT TOUCH THE COOKING GRID OR FIRE PIT WITHOUT PROTECTION.**
2. **DO NOT USE WATER TO EXTINGUISH A FIRE.**

GRILLING TIPS

SLOW COOKING
Swivel the cooking grid away from the fire to reduce the heat on the food. In some cases, raising the position of the grid may work as well.

SEARING/FAST COOKING
Position the cooking grid over the fire and in the lowest position. However, to finish cooking or for more doneness, raise the cooking grid to a higher position.

STANDARD COOKING
Start with the cooking grid in the upper position and centered over the fire. This allows the food to cook for a longer time allowing for more thorough cooking, especially for chicken and pork.

OPERATION INSTRUCTIONS

FOOD SAFETY

Food safety is a critical part of enjoying your outdoor cooking experience. To protect against harmful bacteria, follow these four essential steps:

Clean: Wash hands, utensils, and surfaces with hot, soapy water before and after handling raw meat and poultry.

Separate: Keep raw meats and poultry separate from ready-to-eat foods to prevent cross-contamination. Always use a clean platter and utensils when handling cooked foods.

Cook: Cook meat and poultry thoroughly to eliminate harmful bacteria. Use a food thermometer to ensure proper internal temperatures are reached.

Chill: Refrigerate prepared foods and leftovers promptly to prevent bacterial growth.